



LENSO

INSTRUCTION MANUAL

MODEL: 10B



LIST OF ACCESSORIES

You will receive the following accessories (subject to the options available at the time of your order)



Retro Light



Riflettori



Silicone Diffusion
Dome




Type-C
charging cable



When using, do not expose your eyes to light
Prevent blurred vision

OPERATING INSTRUCTIONS

Product structure diagram.

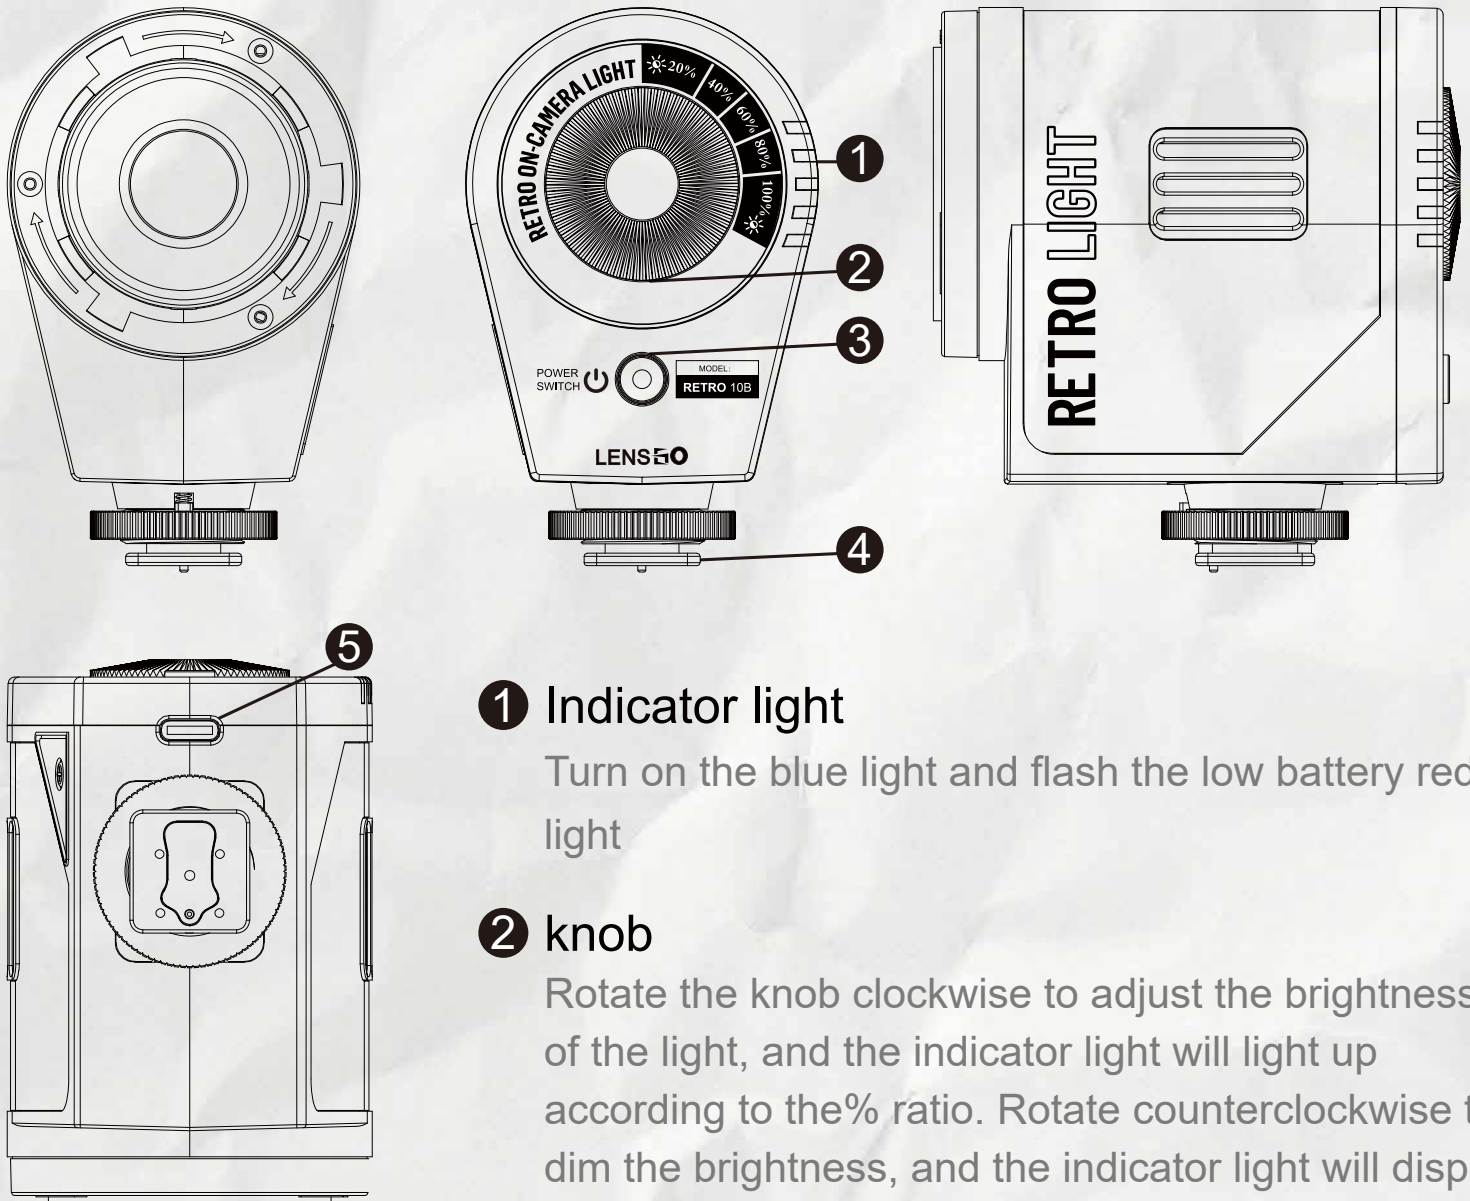

1 Indicator light

Turn on the blue light and flash the low battery red light

2 knob

Rotate the knob clockwise to adjust the brightness of the light, and the indicator light will light up according to the % ratio. Rotate counterclockwise to dim the brightness, and the indicator light will display according to the % brightness ratio

3 Button

Long press to turn on/off,
Double click to enter special effects mode
Click to switch between cold/warm lighting

4 Cold shoe seat

Fixed on top of the camera for use

5 Type-C charging port

Charging voltage 5V2A

1: 0-100% adjustable brightness


Rotate clockwise by **1** to adjust the brightness of the light, and the indicator light will light up according to the percentage. Rotate counterclockwise to dim the brightness, and the indicator light will display according to the brightness%

2: Click to switch between cold/warm lighting

Click **3** to switch instantly

3: 3000K-6500K colour temperature adjustment

Double click **3** to enter color temperature mode, click to switch between cool and warm light, double-click to exit after adjustment is complete

 After turning on, the **1** indicator lights turn **blue**. If the **red** light flashes, please charge the device
When charging, the lights will turn on in percentage order, and the **blue light** will remain on when fully charged



Power on



Please recharge



Charging



Fully charged

10B is a COB 5W, colour rendering index ≥ 96 , burst flash, along the vintage flash styling of the constant light, camera can be used!

- **WITH SILICONE SOFTBOX**

The soft light amplitude is suitable, the light is soft and not harsh

- **0%-100% BRIGHTNESS ADJUSTABLE**

Turning the adjustment knob, the brightness change range is 0-100%.

SPECIFICATION

MODEL:	10B
TYPE:	COB 5W
Colour temperature:	3000K - 6500K
Jadeite thumb ring:	≥ 96
Batteries:	2 x 18500 7.4V (1600mAh)
Charging Voltage:	TYPE - C 5V 2A
Duration of use:	Approx. 1 hour (when used at maximum brightness)
Adjustment range:	Brightness adjustment 0%-100%
Number of beads:	Total 192 pcs
Bead Voltage:	10 ~ 14V
Bead Current:	420-450A

This manual provides information on the proper use and storage of the product and accessories, and assists the user in dealing with questions about their use and in understanding the safety precautions to be taken.

PLEASE READ CAREFULLY

When handing the product over to another person, be sure to include this manual, heed all warnings and follow all instructions in the manual.

2 YEAR WARRANTY DESCRIPTION

The warranty, which applies to all purchasers from our authorised dealers, covers any defects caused by production, as well as failures in the course of normal use, excluding physical damage, natural disasters (fire, flood, earthquake lightning, etc.) and chemical corrosion, unauthorised repairs, replacement of components during handling, collisions at the site of the installation and other failures due to human or force majeure reasons. and damage, or the manual Any malfunction caused by acts expressly prohibited by the instruction manual

ACCESSORY DESCRIPTION

Mobile phone clip, camera frame, hand screws and other accessories are consumables (not in the 2-year warranty), after use, please confirm whether there is aging, damage and other conditions of this phenomenon is normal wear and tear, in order to use the convenience of please contact the dealer in time to buy new parts replacement!

MAINTENANCE METHODS

Please use a soft sponge, soft cloth, dry cloth to clean the product regularly, do not use bleach, wire ball wipe, wipe clean and keep the product dry.

For more information on LENS GO product features,
Please visit **WWW.lensgo.net**



WARNING

- Do not touch the COB lamp beads with your hands to prevent burning hands
- This product is a precision instrument, please avoid dropping it when using it.
- Contact authorised service personnel when repairs are required
- It is recommended to use the original LENS GO cables. Any damage to this product caused by the use of non-Longsong original accessories is not covered by our warranty. Any damage to this product is not covered by our warranty.
- Please clean the product with a soft, dry cloth.
- This specification is based on our rigorous testing. Design and specifications are subject to change without notice
- Please keep it in a safe place, read this instruction manual carefully, and observe all precautions
- Before use, please check whether the installation is stable, to prevent accidents during use.
- Please switch off the product after charging, in order to protect the safety and life of the battery, try not to use it during charging. use the product during charging.
- Do not cover the ventilation holes when using the silicone softbox.

CERTIFICATE OF CONFORMITY

PRODUCT NAME:: _____

MODEL : _____

INSPECTION DATE : _____

INSPECTOR: _____





LENSGO



 Lensgotech




 Lensgo.official



 www.lensgo.net

Use your phone's camera or browser to scan the QR code for product support and user guide.

OR PLEASE VISIT: <https://www.lensgo.net/> , and click on the
“ **User Guide** ” menu.

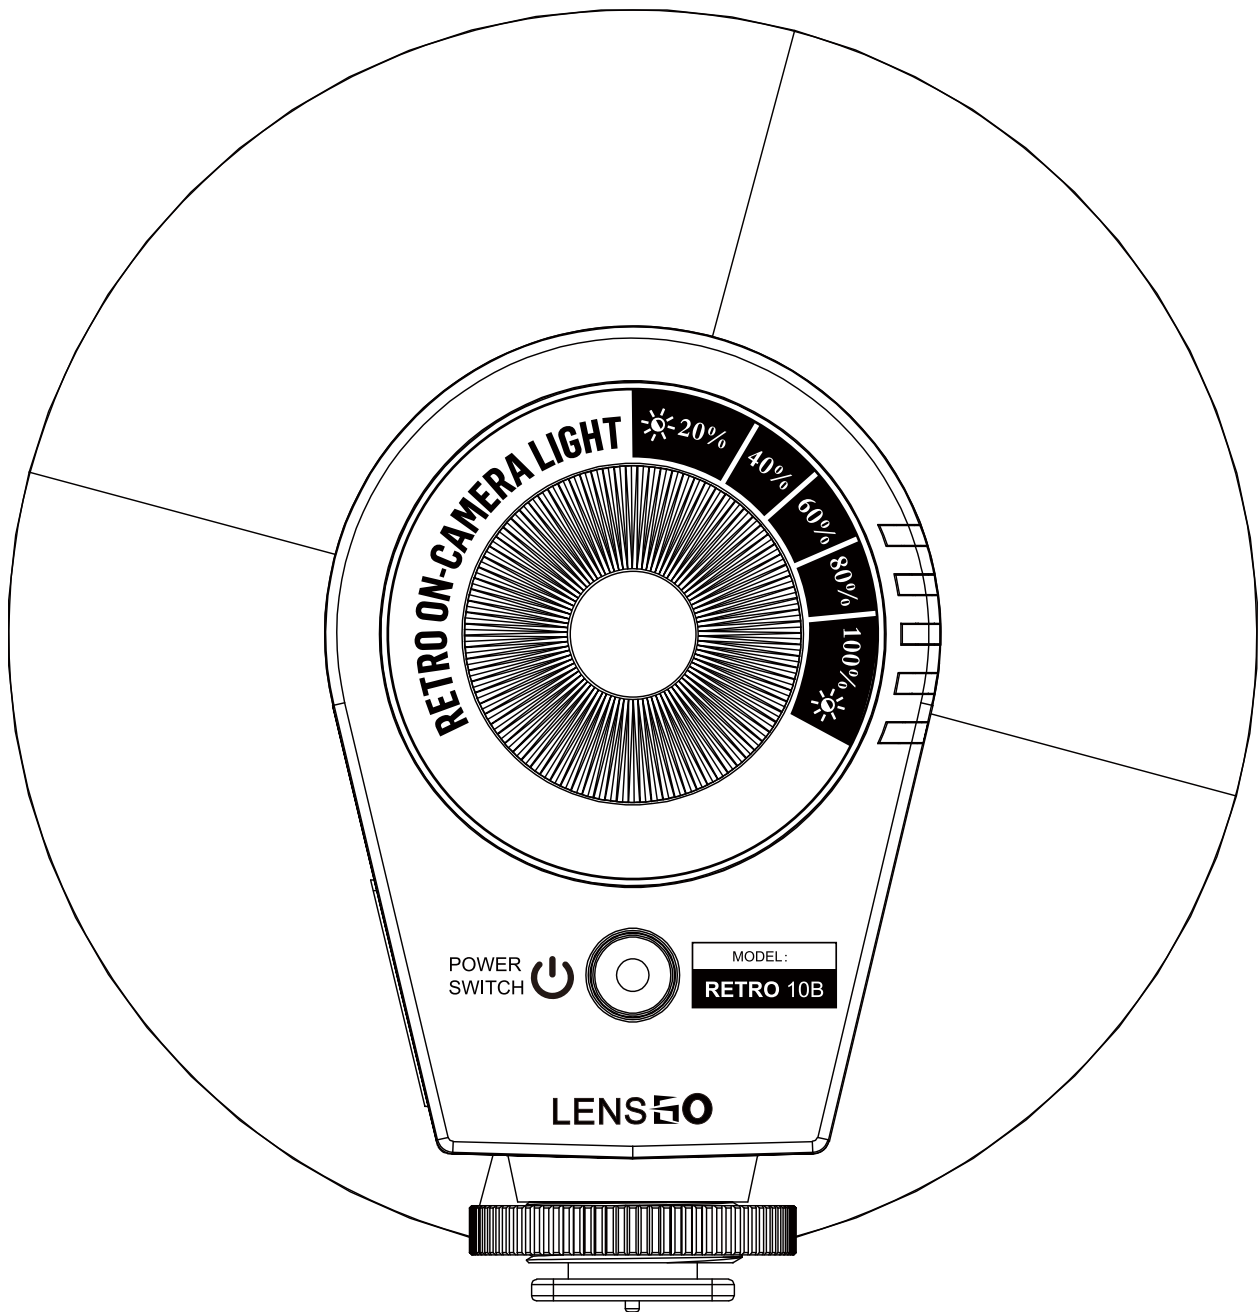

JIAZHIYING PHOTOGRAPHY EQUIPMENT CO., LTD.

Address: Room 201, Building C, No. 8 Fengqi Road, Fucheng'ao Community,
Pinghu Subdistrict, Longgang District, Shenzhen, China

Web: <https://www.lensgo.net/>

Executive Standard: Q/LYJ004-2018



Facebook: Lensgotech



Made in China